


User Guide  
6621-2210



# DDW-120

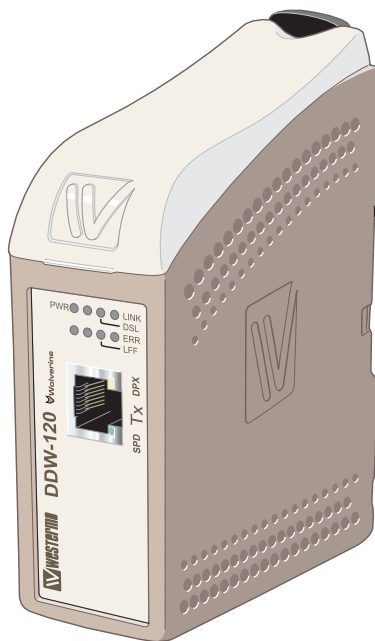

**Industrial Ethernet  
SHDSL Extender**



[www.westermosales.com](http://www.westermosales.com)

## **Legal information**

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy and reliability or contents of this document. Westermo reserves the right to revise this document or withdraw it at any time without prior notice.

Under no circumstances shall Westermo be responsible for any loss of data or income or any special, incidental, and consequential or indirect damages howsoever caused.

More information about Westermo can be found at the following Internet address:

**<http://www.westermo.com>**

## Safety



### **Before using this unit:**

Read this manual completely and gather all information on the unit. Make sure that you understand it fully. Check that your application does not exceed the safe operating specifications for this unit.

Hazardous voltage may occur within this unit when connected to power supply or TNV circuits.

Prevent access to hazardous voltage by disconnecting the unit from power supply and all other electrical connections.

Prevent damage to internal electronics from electrostatic discharges (ESD) by discharging your body to a grounding point (e.g. use of wrist strap).



### **Before installation:**

This unit should only be installed by qualified personnel.

This unit should be built-in to an apparatus cabinet, or similar, where access is restricted to service personnel only.

The power supply wiring must be sufficiently fused, and if necessary it must be possible to disconnect manually from the power supply. Ensure compliance to national installation regulations.

This unit uses convection cooling. To avoid obstructing the airflow around the unit, follow the spacing recommendations (see Installation section).

## Care recommendations

Follow the care recommendations below to maintain full operation of unit and to fulfil the warranty obligations.

This unit must not be operating with removed covers or lids.

Do not attempt to disassemble the unit. There are no user serviceable parts inside.

Do not drop, knock or shake the unit, rough handling above the specification may cause damage to internal circuit boards.

Do not use harsh chemicals, cleaning solvents or strong detergents to clean the unit.

Do not paint the unit. Paint can clog the unit and prevent proper operation.

Do not expose the unit to any kind of liquids (rain, beverages, etc). The unit is not waterproof. Keep the unit within the specified humidity levels.

Do not use or store the unit in dusty, dirty areas, connectors as well as other mechanical part may be damaged.

If the unit is not working properly, contact the place of purchase, nearest Westermo distributor office or Westermo Tech support.

## Maintenance

No maintenance is required, as long as the unit is used as intended within the specified conditions.

## Agency approvals and standards compliance

Type	Approved Agency/ W-mo	Approval / Compliance
EMC	W-mo	EN 61000-6-2, Immunity industrial environments
	W-mo	EN 55024, Immunity IT equipment
	W-mo	EN 61000-6-3, Emission residential environments
	W-mo	FCC part 15 Class B
	W-mo	EN 50121-4, Railway signalling and telecommunications apparatus
Safety	W-mo	EN 60950-1, IT equipment
SHDSL	NEMKO	ITU-T G.991.2, G.SHDSL and G.SHDSL.bis standard

### FCC Part 15.105 Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ⌘ Reorient or relocate the receiving antenna
- ⌘ Increase the separation between the equipment and receiver
- ⌘ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- ⌘ Consult the dealer or an experienced radio/TV technician for help.

# Declaration of Conformity



Westermo Teleindustri AB

## Declaration of conformity

The manufacturer      Westermo Teleindustri AB  
SE-640 40 Stora Sundby, Sweden

Herewith declares that the product(s)

Type of product	Model	Art no
SHDSL Ethernet bridge / DIN rail mounted	DDW-120	3621-0100


is in conformity with the following EC directive(s).

No	Short name
2004/108/EC	Electromagnetic Compatibility (EMC)

References of standards applied for this EC declaration of conformity.

No	Title	Issue
EN 61000-6-1	Immunity for residential, commercial and light-industrial environments	2007
EN 61000-6-2	Immunity for industrial environments	2005
EN 61000-6-3	Emission standard for residential, commercial and light-industrial environments	2007
EN 61000-6-4	Emission standard for industrial environments.	2007
EN 50121-4	Railway applications – Electromagnetic compatibility – Emission and Immunity of the signalling and telecommunications apparatus	2006
EN 55024	Information technology equipment – Immunity	1998 + A1:2001 + A2:2003

The last two digits of the year in which the CE marking was affixed:      08



Signature

Pierre Öberg  
R&D Manager  
10nd October 2008

---

Postaddress/Postal address	Tel.	Telefax	Postgiro	Bankgiro	Org.nr/ Corp. identity number	Registered office
S-640 40 Stora Sundby Sweden	016-428000 Int+46 16428000	016-428001 Int+46 16428001	52 72 79-4	5671-5550	556361-2604	Eskilstuna

## Type tests and environmental conditions

Electromagnetic Compatibility			
Phenomena	Test	Description	Test levels
ESD	EN 61000-4-2	Enclosure contact	± 6 kV
		Enclosure air	± 8 kV
RF field AM modulated	IEC 61000-4-3	Enclosure	10 V/m 80% AM (1 kHz), 80 – 1 000 MHz 20 V/m 80% AM (1 kHz), 80 – 2 000 MHz
RF field 900 MHz	ENV 50204	Enclosure	20 V/m pulse modulated 200 Hz, 900 ± 5 MHz
Fast transient	EN 61000-4-4	Signal ports	± 2 kV
		Power ports	± 2 kV
Surge	EN 61000-4-5	Signal ports unbalanced	± 2 kV line to earth, ± 2 kV line to line
		Signal ports balanced	± 2 kV line to earth, ± 1 kV line to line
		Power ports	± 2 kV line to earth, ± 2 kV line to line
RF conducted	EN 61000-4-6	Signal ports	10 V 80% AM (1 kHz), 0.15 – 80 MHz
		Power ports	10 V 80% AM (1 kHz), 0.15 – 80 MHz
Power frequency magnetic field	EN 61000-4-8	Enclosure	100 A/m, 50 Hz, 16.7 Hz & 0 Hz
Pulse magnetic field	EN 61000-4-9	Enclosure	300 A/m, 6.4 / 16 µs pulse
Voltage dips and interruption	EN 61000-4-11	AC power ports	10 & 5 000 ms, interruption 10 & 500 ms, 30% reduction 100 & 1 000 ms, 60% reduction
Mains freq. 50 Hz	EN 61000-4-16	Signal ports	100 V 50 Hz line to earth
Mains freq. 50 Hz	SS 436 15 03	Signal ports	250 V 50 Hz line to earth
Voltage dips and interruption	EN 61000-4-29	DC power ports	10 & 100 ms, interruption 10 ms, 30% reduction 10 ms, 60% reduction +20% above & -20% below rated voltage
Radiated emission	EN 55022	Enclosure	Class B
	FCC part 15		Class B
Conducted emission	EN 55022	AC power ports	Class B
	FCC part 15	AC power ports	Class B
	EN 55022	DC power ports	Class B
Dielectric strength	EN 60950	Signal port to other isolated ports	2 kVrms 50 Hz 1 min
		Power port to other isolated ports	3 kVrms 50 Hz 1 min 2 kVrms 50 Hz 1 min (@ rated power <60 V)
Environmental			
Temperature		Operating	-40 to +70°C
		Storage & Transport	-40 to +70°C
Humidity		Operating	5 to 95% relative humidity
		Storage & Transport	5 to 95% relative humidity
Altitude		Operating	2 000 m / 70 kPa
Reliability prediction (MTBF)	MIL-HDBK- 217F	Operating	600 000h
Service life		Operating	10 year
Vibration	IEC 60068-2-6	Operating	7.5 mm, 5 – 8 Hz 2 g, 8 – 500 Hz
Shock	IEC 60068-2-27	Operating	15 g, 11 ms
Packaging			
Enclosure	UL 94	PC / ABS	Flammability class V-1
Dimension W x H x D			35 x 121 x 1119 mm
Weight			0.2 kg
Degree of protection	IEC 529	Enclosure	IP 21
Cooling			Convection
Mounting			Horizontal on 35 mm DIN-rail

# Description

## Functional description

The DDW-120 Ethernet Extender is the ideal solution for extending your Ethernet network over copper cables where in the past the only option would have been fibre. At shorter range the transfer rate will be as fast as 5.7 Mbit/s in both directions. According to standard transmission distances up to 6.2 miles (10 km) are possible, depending on the quality of the cables this is increased in most applications. It is transparent for multicast addressing, VLAN packets, VPN pass-through for IPSec and for protocols like MODBUS/tcp and Profinet. The Link Fault Forward (LFF) functionality in DDW-120 forwards information about the Ethernet link status, this is sent over the SHDSL link between two DDW-120 units. In many applications it is a requirement to disconnect the link on the other side of the SHDSL link if the primary Ethernet link goes down.

The units will auto negotiate the transmission speed but can also be forced to choose a slower (more reliable) or faster (less reliable) data rate. DDW-120 can be used in point-to-point applications or as start and termination unit together with DDW-220/221/222 in a daisy-chain application.

### Table showing speed versus distance

	DDW-120 @ 0.5 mm <sup>2</sup>	DDW-120 @ 0.4 mm <sup>2</sup>
Speed bit/s	Distance metre / miles	Distance metre / miles
192000	10000 / 6.21	6450 / 4.00
1024000	7650 / 4.75	4850 / 3.01
1280000	7050 / 4.38	4700 / 2.92
2304000	5950 / 3.69	4150 / 2.58
3328000	4900 / 3.04	3700 / 2.30
4544000	4250 / 2.64	3150 / 1.95
5696000	3650 / 2.26	2800 / 1.73

Distance is tested without noise.

### Description of used nomenclature:

#### Noise margin:

The margin between signal and noise (dB)

#### CO/CPE:

CO (Central Office) answering central unit, the CO configures the CPE when establishing a connection. CPE (Customer Premises Equipment) is the unit that initiates the connection.

#### Annex A and B:

Annex B in ITU-T Rec. G.991.2 describes those specifications that are unique to SHDSL systems operating under conditions such as those typically encountered within European networks.

## Getting started

The DDW-120 is easy to use and install, the units work in pairs, one as has to be configured as CO (Central Office) and one as CPE (Customer Premises Equipment). This configuration is made with DIP-switches situated under the lid of the DDW-120.

### ① Connect the SHDSL Line

1) Connect the twisted pair to DSL screw terminal 1 and 2 (polarity independent) situated at the base of the DDW-120.

### ② Connect the Ethernet Line

Connect Ethernet to the TX port on the front of the DDW-120.

The factory settings for the DDW-120 is plug and play mode where TX port is enabled for:

- ⌘ Ethernet Auto-negotiation enabled.
- ⌘ Auto MDI/MDI-X.
- ⌘ Auto-polarity enabled.

The DDW-120 will automatically sense the data rate of the connected unit and cable type.

### ③ Settings in the units

The units operate in pairs, one as CO (Central Office) and one as CPE (Customer Premises Equipment). Factory setting in the DDW-120 is as CPE.

**Note!** Before connection and installation one of the connecting units have to be reconfigured as a CO, see DIP-switch S2:4.

Depending on the quality of the line and the distance there is possibility to select auto-baud function.


This is done via DIP switches in the unit configured as CO. Factory default is manual speed 192 kbit/s.

**Note!**

If the DSL link is not established, the speed might be set to high for the distance.

## Diagnostic information:

DDW-tool is a diagnostic tool that can be used to analyse the SHDSL and Ethernet connection. After installing the DDWtool.exe (the installation file is available on the CD) you have to connect your computer (serial USB port) to the diagnostic port under the lid of DDW-120. To run the diagnostic tool the following steps need to be taken.

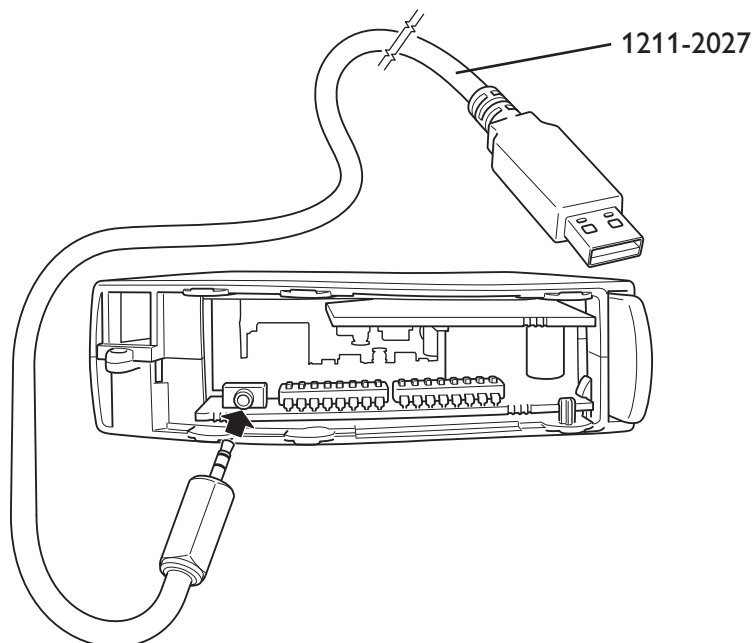

- 1) Connect the standard cable 1211-2027 to the diagnostic port, located under the lid of DDW-120.
- 2) Choose the corresponding Com port in the drop list of the tool. The tool will try to find the port used by the debug cable.
- 3) Click the button connect, if the correct com port is selected DDW-tool will be updated with actual status online information.

## Information from diagnostic tool

- Software release
- Serial number
- DIP switch settings
- If the unit is configured as CO or CPE
- Ethernet link status
- Ethernet data rate
- Ethernet duplex
- System uptime
- DSL uptime
- DSL negotiations
- LFF status
- DSL link state
- DSL data rate
- DSL noise margin (information is sampled and continually displayed)

## Interface specifications

<b>Power</b>	
Rated voltage	12 to 48 VDC
Operating voltage	10 to 60 VDC
Rated current	240 mA @ 12 VDC 110 mA @ 24 VDC 60 mA @ 48 VDC
Rated frequency	DC
Inrush current, I <sup>2</sup> t	0.23 A <sup>2</sup> s
Startup current*	0.65 A <sub>peak</sub>
Polarity	Reverse polarity protected
Redundant power input	Yes
Isolation to	All other
Connection	Detachable screw terminal
Connector size	AWG 24 - 12 (0.2 – 2.5 mm <sup>2</sup> )
Shielded cable	Not required

\* If external power supply is used it must meet specified start up current

<b>Service port</b>	
Electrical specification	TTL-level
Data rate	115.2 kbit/s
Data format	8 data bits, none parity, 1 stop bits, no flow control
Circuit type	SELV
Transmission range	15 m
Isolation to	All other
Galvanic connection to	None
Connection	2.5 mm jack, use Westermo cable 1211-2027


<b>DSL</b>	
Electrical specification	IEEE G.991.2 Annex B
Data rate	192 kbit/s to 5696 kbit/s
Protocol	EFM according to IEEE 802.3-2004
Transmission range	According to ITU-T G.991.2 depending on the line quality
Protection	Overcurrent / overvoltage protection circuit and varistor
Isolation to	All other
Connection	Detachable screw terminal
Connector size	AWG 24 - 12 (0.2 – 2.5 mm <sup>2</sup> )
Shielded cable	Not required

<b>Ethernet TX</b>	
Electrical specification	IEEE std 802.3. 2000 Edition
Data rate	10 Mbit/s, 100 Mbit/s, manual or auto
Duplex	Full or half, manual or auto
Circuit type	SELV
Transmission range	100 m
Isolation to	All other
Connection	RJ-45 MDI or auto MDI/MDI-X
Shielded cable	Not required, except when installed in Railway applications as signalling and telecommunications apparatus and located close to rails*
Conductive housing	Isolated to all other circuits
Miscellaneous	If Auto-Neg. is disabled then this interface will be set MDI
Number of ports	1

\* To minimise the risk of interference, a shielded cable is recommended when the cable is located inside 3 m boundary to the rails and connected to this port.

The cable shield should be properly connected (360°) to an earthing point within 1 m from this port. This earthing point should have a low impedance connection to the conductive enclosure of the apparatus cabinet, or similar, where the unit is built-in. This conductive enclosure should be connected to the earthing system of an installation and may be directly connected to the protective earth.

# Connections

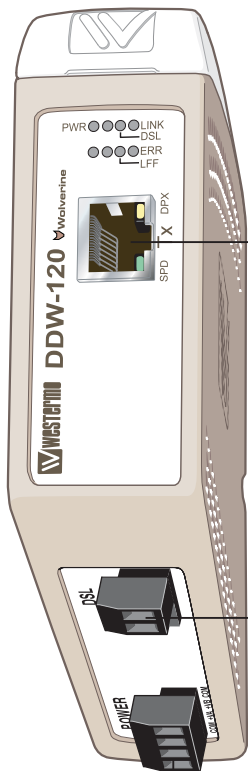

## Ethernet TX connection (RJ-45 connector) 1 – 4\*\*

Position	Direction*	Description
1	In/Out	TD+
2	In/Out	TD-
3	In/Out	RD+
4	–	Not Connected
5	–	Not Connected
6	In/Out	RD-
7	–	Not Connected
8	–	Not Connected


CAT 5 cable is recommended. Unshielded (UTP) or shielded (STP) connectors can be used.

## DSL screw connector 1 & 2

Position	Direction	Description
1	In/Out	2-wire Receive/ Transmit SHDSL
2	In/Out	2-wire Receive/ Transmit SHDSL

## Power connection

Position	Direction*	Description
1	In	+ Voltage A
2	In	+ Voltage B
3	In	Common
4	In	Common


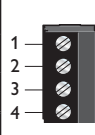


\* Direction relative this unit

\*\* To minimise the risk of interference, a shielded cable is recommended when the cable is located inside 3 m boundary to the rails and connected to this port. The cable shield should be properly connected (360°) to an earthing point within 1 m from this port. This earthing point should have a low impedance connection to the conductive enclosure of the apparatus cabinet, or similar, where the unit is built-in. This conductive enclosure should be connected to the earthing system of an installation and may be directly connected to the protective earth.

## LED indicators

LED	Status	Description
PWR (green)	OFF	No internal power
	ON	Internal power ok / boot ok
LFF (green)	OFF	LFF disabled
	ON	LFF enabled
ERR (red)	OFF	LFF not active
	ON	LFF active, link fault on this unit
	Flash	LFF active, link fault on opposite unit
DSL	OFF	No DSL link
	ON	DSL link established
	Flash	DSL link negotiating
LINK	OFF	No Ethernet link
	ON	Ethernet link established
	Flash	Ethernet traffic indication
SPD	OFF	Ethernet speed, 10 Mbit/s
	ON	Ethernet speed, 100 Mbit/s
DPX	OFF	Ethernet duplex, half
	ON	Ethernet duplex, full

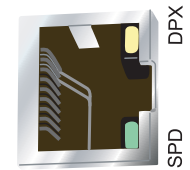


# DIP-switch settings



## Before DIP-switch settings:

Prevent damage to internal electronics from electrostatic discharges (ESD) by discharging your body to a grounding point (e.g. use of wrist strap).


**NOTE** DIP-switch alterations are only effective after a power on.

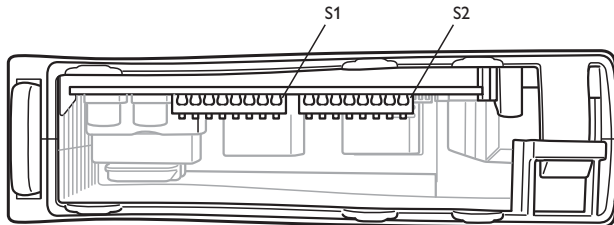


### S1 DIP-switch



Manual speed locked according to S1:4-8\*




CPE, Customer Premises Equipment




Autobaud, normal mode selected



CO, Central Office



Autobaud, high speed mode selected



LFF disabled



Autobaud, reliable mode selected




LFF enabled

S1: 1, 6, 7 and 8 not used

\* Autobaud is recommended. When using manual locked speed user must make sure a correct noise margin is achieved. Westermo recommends at least 3dB noise margin for reliable operation.


## S2 DIP-switch




Ethernet auto-negotiation disabled




DSL-speed, 2048 kbit/s



Ethernet auto-negotiation enabled




DSL-speed, 2304 kbit/s



Ethernet speed 10 Mbit/s  
(if auto-neg. disabled)



DSL-speed, 2688 kbit/s



Ethernet speed 100 Mbit/s  
(if auto-neg. enabled)



DSL-speed, 3072 kbit/s




Ethernet half duplex  
(if auto-neg. disabled)



DSL-speed, 3456 kbit/s



Ethernet full duplex  
(if auto-neg. disabled)



DSL-speed, 3840 kbit/s



DSL speed, 192 kbit/s



DSL-speed, 4224 kbit/s



DSL-speed, 384 kbit/s



DSL-speed, 4608 kbit/s



DSL-speed, 512 kbit/s



DSL-speed, 4992 kbit/s



DSL-speed, 768 kbit/s



DSL-speed, 5376 kbit/s



DSL-speed, 1024 kbit/s



DSL-speed, 5696 kbit/s



DSL-speed, 1280 kbit/s

## Factory settings

S1




S2




## Mounting

This unit should be mounted on 35 mm DIN-rail, which is horizontally mounted inside an apparatus cabinet, or similar. Snap on mounting, see figure.

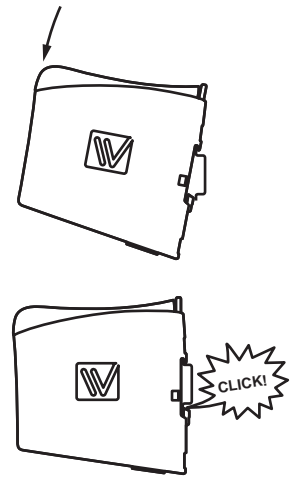


## Cooling

This unit uses convection cooling. To avoid obstructing the airflow around the unit, use the following spacing rules. Minimum spacing 1 inch (25 mm) above /below and 0.4 inches (10 mm) left /right the unit. Spacing is recommended for the use of unit in full operating temperature range and service life.

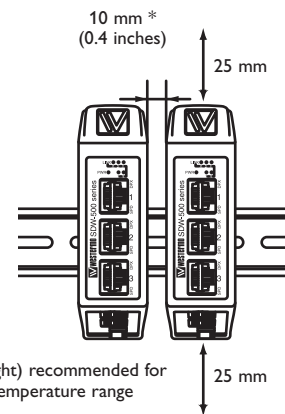

## Removal

Press down the black support at the top of the unit. See figure.

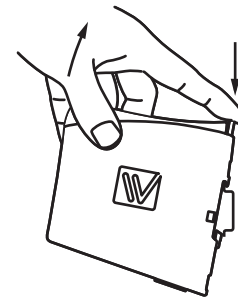



Gross Automation (877) 268-3700 · [www.westermosales.com](http://www.westermosales.com) · [sales@grossautomation.com](mailto:sales@grossautomation.com)

---